


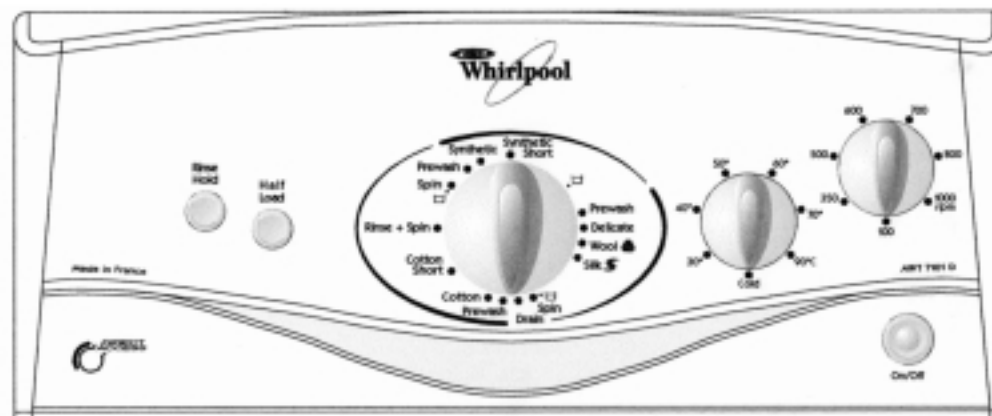







-  Wool
-  Silk
-  Rinse Hold Option



- 1) For improved garment care, spin speed is restricted.
- 2) Programme duration figures (guideline) are valid for maximum temperature wash with no special functions.

| Programme | Type of fabric / Degree of soiling / Notes | Max. Load kg | Detergent and Additives | | | Options | | Temperature Selector °C | Maximum Technical Spin Speed rpm/min | Recommended Spin Speed rpm/min | Programme duration approx. min 2) |
|-------------------------------|--|-----------------|---|---|---|---|--|----------------------------|---|-----------------------------------|--------------------------------------|
| | | | Pre-wash  | Wash  | Softener  | Rinse Hold  | Half Load  | | | | |
| Cotton with prewash | Heavily soiled, hard wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.). The max. load for heavily soiled laundry is 3.5 kg. | 5.0 | Yes | Yes | * | * | * | Cold to 90 | 1000 | 800 to 1000 | 135 |
| Cotton | Averagely soiled, hard wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.). | 5.0 | — | Yes | * | * | * | Cold to 90 | 1000 | 800 to 1000 | 120 |
| Cotton short | Lightly soiled textiles in cotton or linen blouses, skirts, dark coloured terry cloth, coloured linen articles, jeans, etc. | 5.0 | — | Yes | * | * | * | Cold to 40 | 1000 | 600 to 800 | 70 |
| Rinse + Spin | Programme for treating wash with starch or softener. Terminates with an intensive spin cycle. | 5.0 | — | — | * | * | * | Cold | 1000 | 600 to 800 | 30 |
| Spin | Programme for Intensive spin cycle. | 5.0 | — | — | — | — | — | — | 1000 | 600 to 800 | 15 |
| Synthetic with prewash | Heavily soiled blouses, skirts, etc. made of polyester (Diolen, Trevira) polyamide (Perlon, Nylon) or cotton blends. | 2.0 | Yes | Yes | * | * | * | Cold to 60 | 800 | 600 to 800 | 100 |
| Synthetic | Lightly or averagely soiled blouses, skirts, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends. | 2.0 | — | Yes | * | * | * | Cold to 60 | 800 1) | 600 to 800 | 90 |
| Synthetic short | Lightly soiled blouses, skirts, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends. | 2.0 | — | Yes | * | * | * | Cold to 40 | 800 1) | 600 to 800 | 50 |
| Delicate with prewash | Heavily soiled delicate curtains, dresses, skirts, shirts and blouses. | 1.5 | Yes | Yes | * | * | — | Cold to 40 | 800 1) | 600 to 800 | 55 |
| Delicate | Delicate curtains, dresses, skirts, shirts and blouses. | 1.5 | — | Yes | * | * | — | Cold to 40 | 800 1) | 100 to 500 | 40 |
| Wool | Only machine washable woollens with pure new wool label. If you select the special function "Rinse Hold" do not leave garments to soak for too long. | 1.0 | — | Yes | * | * | — | Cold to 30 | 800 1) | 100 to 500 | 35 |
| Silk | Machine washable silk and viscose articles. No spin drain only. | 1.5 | — | Yes | * | * | — | Cold | — | 100 to 500 | 40 |
| Spin | Programme for gentle spin cycle. | 1.5 | — | — | — | — | — | — | 800 1) | 100 to 500 | 5 |
| Drain | Drain only, without spin cycle. Alternative way of terminating programmes with "Rinse Hold" setting. | — | — | — | — | — | — | — | — | — | 3 |







N.B.: The excess of detergent in the dispenser could cause technical problems.

| CONSUMPTION DATA | | | | | |
|--------------------|---------------------------|-----------|-----------|--------------|--------------------------|
| Programme | Temperature selector (°C) | Load (kg) | Water (l) | Energy (kWh) | Programme Duration (min) |
| Cotton | 90 | 5.0 | 71 | 1.90 | 120 |
| Cotton | 60 | 5.0 | 55 | 0.95 | 120 |
| Cotton + Half Load | 60 | 2.5 | 35 | 0.95 | 95 |
| Cotton short | 40 | 5.0 | 55 | 0.60 | 70 |
| Synthetic | 60 | 2.0 | 57 | 0.80 | 90 |
| Synthetic short | 40 | 2.0 | 49 | 0.40 | 50 |
| Delicate | 30 | 1.5 | 50 | 0.30 | 40 |
| Wool | 40 | 1.0 | 50 | 0.40 | 35 |
| Silk | 30 | 1.0 | 50 | 0.30 | 40 |

Prewash cycle increases programme duration by approx. 15 min. Consumption values were measured in normalized conditions in compliance with Standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

ADDING DETERGENT AND ADDITIVES

Add the detergent and the additives into the dispenser as follows:

- Programme with pre and main wash  
- Main wash programme without prewash 
- Fabric softeners and conditioners 
- Stain remover agents 
- Anti-scale agents (water hardness 4) 

Important:

- Be careful not to fill more than the “MAX” level mark.
- For programme with prewash: do not use liquid detergents.
- For programmes without prewash from cold to 40° C, it is recommended to use a liquid detergent to avoid whitish residues on the coloured laundry.




CLOSE THE DOOR AND SELECT THE PROGRAMME

1. Turn the **programme selector knob** clockwise to the desired programme.
2. Turn the **temperature knob** to the required temperature.
3. Turn the **spin speed selector** to the required setting.

PRESS THE DESIRED SPECIAL OPTION BUTTON(S)

“Rinse Hold” button

- The laundry remains in the last rinse water without progressing to the spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programmes “Synthetic” or “Delicate”.
- This function is particularly useful if you want to postpone spinning to a later time or when you do not wish to spin the clothes.

Note: The programme selector knob stops on the position .

Terminate the “Rinse Hold” option:

- Press the “Rinse Hold” button again; the programme will terminate automatically with the spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the drain programme and push on the “On/Off” button again.

“Half Load” button

- Reduces water consumption in the cotton and synthetic programme, above all during prewash and rinse.
- Especially suitable for lightly soiled or small loads (reduce the detergent quantity).

PROGRAMME START

Open the tap and press the “On/Off” button. The pilot lamp lights up.

DOOR LOCK

During the running programme the door can be opened for adding further laundry.

The door locks automatically in all programmes. If the programme is stopped or the electrical power supply is terminated, the door lock will open after approximately 1 minute.

Note: If you open the door during the delicate or wool programme, there will be no spinning at the end of the cycle but only draining. If you want to spin the laundry start the gentle spin programme.

PROGRAMME END

- The programme selector knob is at the end of the cycle.
1. Press the “On/Off” button.
 2. Cancel the special options by pressing the appropriate buttons.
 3. Turn the water supply tap off.
 4. Wait for the door to unlock (about 1 minute).
 5. Open the door and the drum flaps and unload the machine.

SELECTING A NEW PROGRAMME, SPIN SPEED, OPTIONS AFTER PROGRAMME START

1. Press the “On/Off” button to switch off the appliance.
2. Select the new programme, temperature, spin speed and options.
3. Press the “On/Off” button to switch on the appliance.

TO STOP, RESET A PROGRAMME BEFORE THE END

1. Press the “On/Off” button to switch off the appliance.
2. Set the programme selector to “Drain”.
3. Press the “On/Off” button to start the drain programme.
Only open the door when the programme selector is at the end of the cycle and the door is unlocked (after approximately 1 minute).